



2.5 RCB 600 CHARACTERISTICS

2.5.1 Dimensions

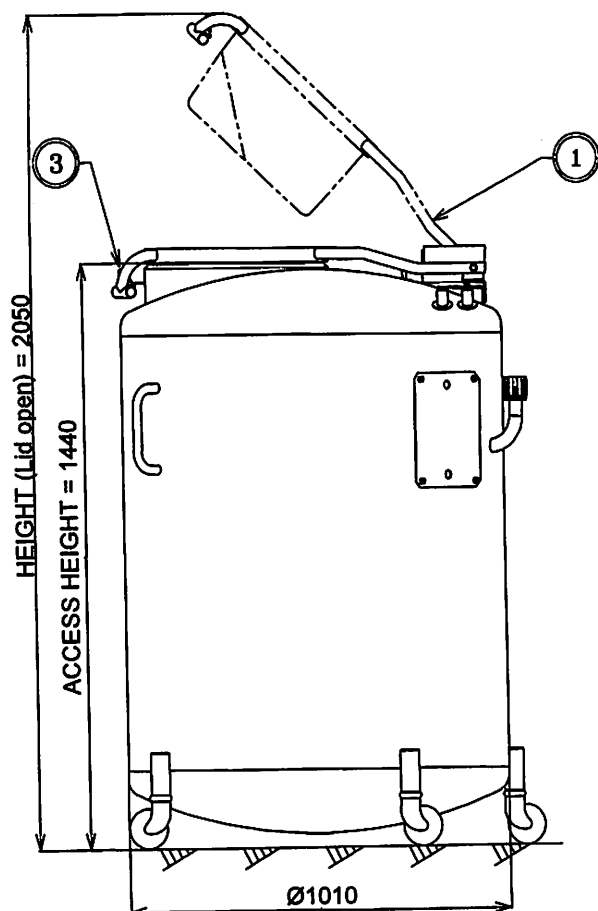

- 1 - Compensated lid (optional)
- 2 - Manual filling in switch
- 3 - Lock
- 4 - Temperature display
- 5 - Level regulator display
- 6 - Temperature probe
- 7 - capacitive level gauge
- 8 - Liquid nitrogen supply
- 9 - Electronic box (depending on model)

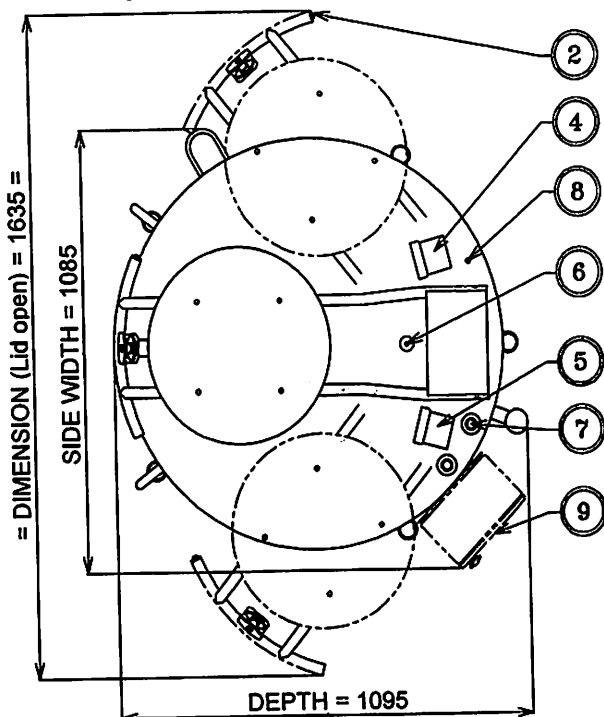

NH78291-EN

Revision: j

Page: 13/34


This document is the property of AIR LIQUIDE, 75 quai d'orsay 75321 Paris cedex 07. It must be treated as strictly confidential. It may neither be reproduced nor divulged without the Company's express consent. AIR LIQUIDE reserves the right to modify all or part of this document without prior notification

2.5.2 Storage properties

		Liquid phase storage	Gas phase storage
Useful capacity	litre	575	
Weight empty	kg	270	
Weight full : ⁽²⁾	kg	735	337
Storage diameter	mm	850	
Access height	mm	1440	
Total height (with compensated lid)	mm	2050	
Height under lid	mm	825	
Daily evaporation ⁽¹⁾	L/j	4,5	
Static endurance ⁽¹⁾	Day	127	18

(1) *These values are given for apparatuses tested without any internal equipment. They are given for guidance and are arbitrary, and valid for generally observed usage conditions. They can vary depending on manufacturing tolerances and local atmospheric condition.*

(2) *Weight without auxiliaries*

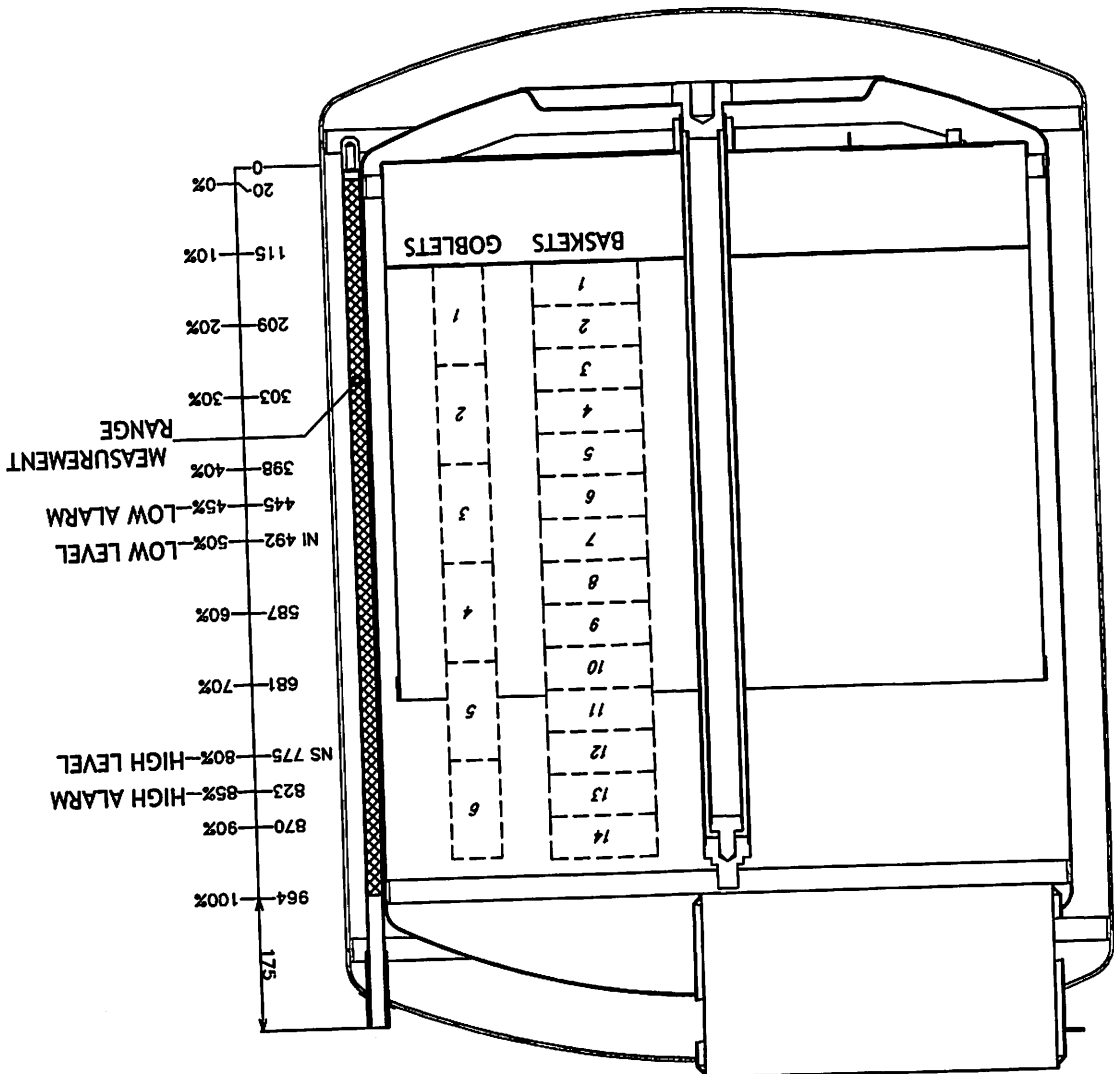

NOTE:

NS = Maximum filling level

NI = Minimum filling level

NS-NI = Minimum difference (5%) adjustable between the high level and the low level

(See corresponding guide)

Level alarms shown on the diagram are default values (factory settings).


NH78291-EN

Revision: J

Page: 15/34

This document is the property of AIR LIQUIDE, 75 quai d'orsay 75321 Paris cedex 07. It must be treated as strictly confidential. It may neither be reproduced nor divulged without the Company's express consent. AIR LIQUIDE reserves the right to modify all or part of this document without prior notification

2.5.4 Measurement scale (Storage in gas phase)

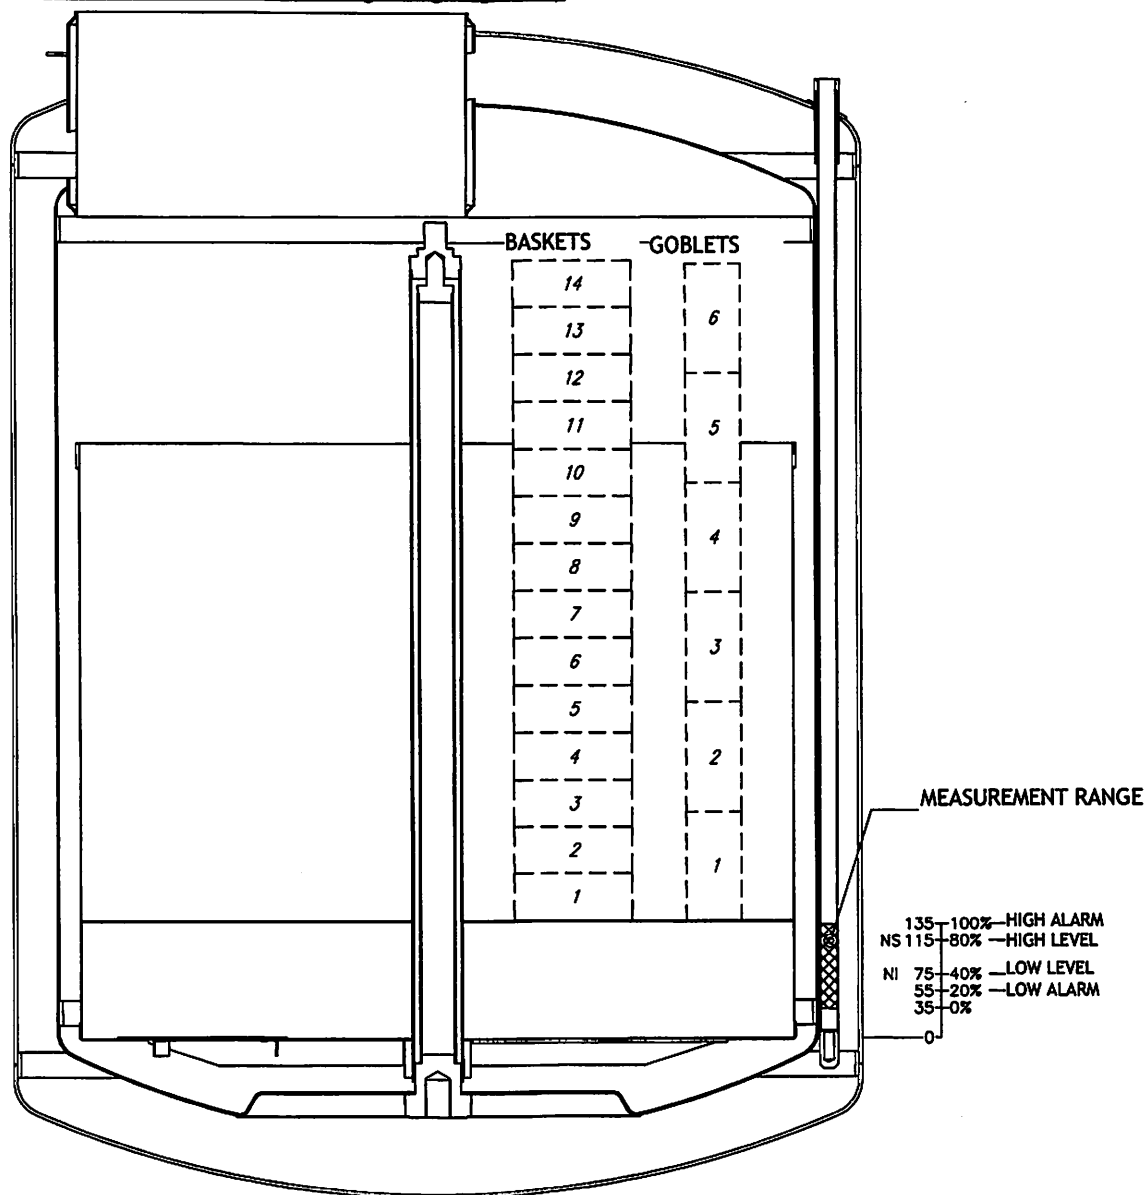

NOTE:

NS = Maximum filling level

NI = Minimum filling level

Level alarms shown on the diagram are default values (factory settings).